



1 Close the Shutoff valve



2 Remove existing flexible water pipe underneath the water tank




3 Install the "T" adaptor as shown



4 Re install the flexible pipe on the T-Adaptor



5 Fully insert the hose in the T-adaptor & tighten the nut with the tool (provided).

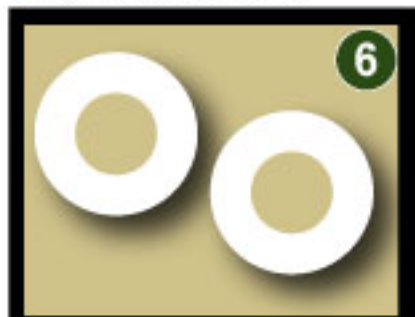

6 Use rings only if you need to raise the seat



7 Place bottom part of the controller unit's suction cup and fully tighten the nut until fully secure on the toilet bowl



8 Fully insert the in/out hoses into the two connectors and tighten the nut with the tool (provided).



9 Snap on the top portion of the Controller on the base unit

**Installs in
less than
15 Minutes**



10 Install the Nozzle on the bowl under the seat (with the vacuum cups)